


IMPORTANT

Refer to the manual and the diagram below when wiring the HLWLAN/HLWLANAU.

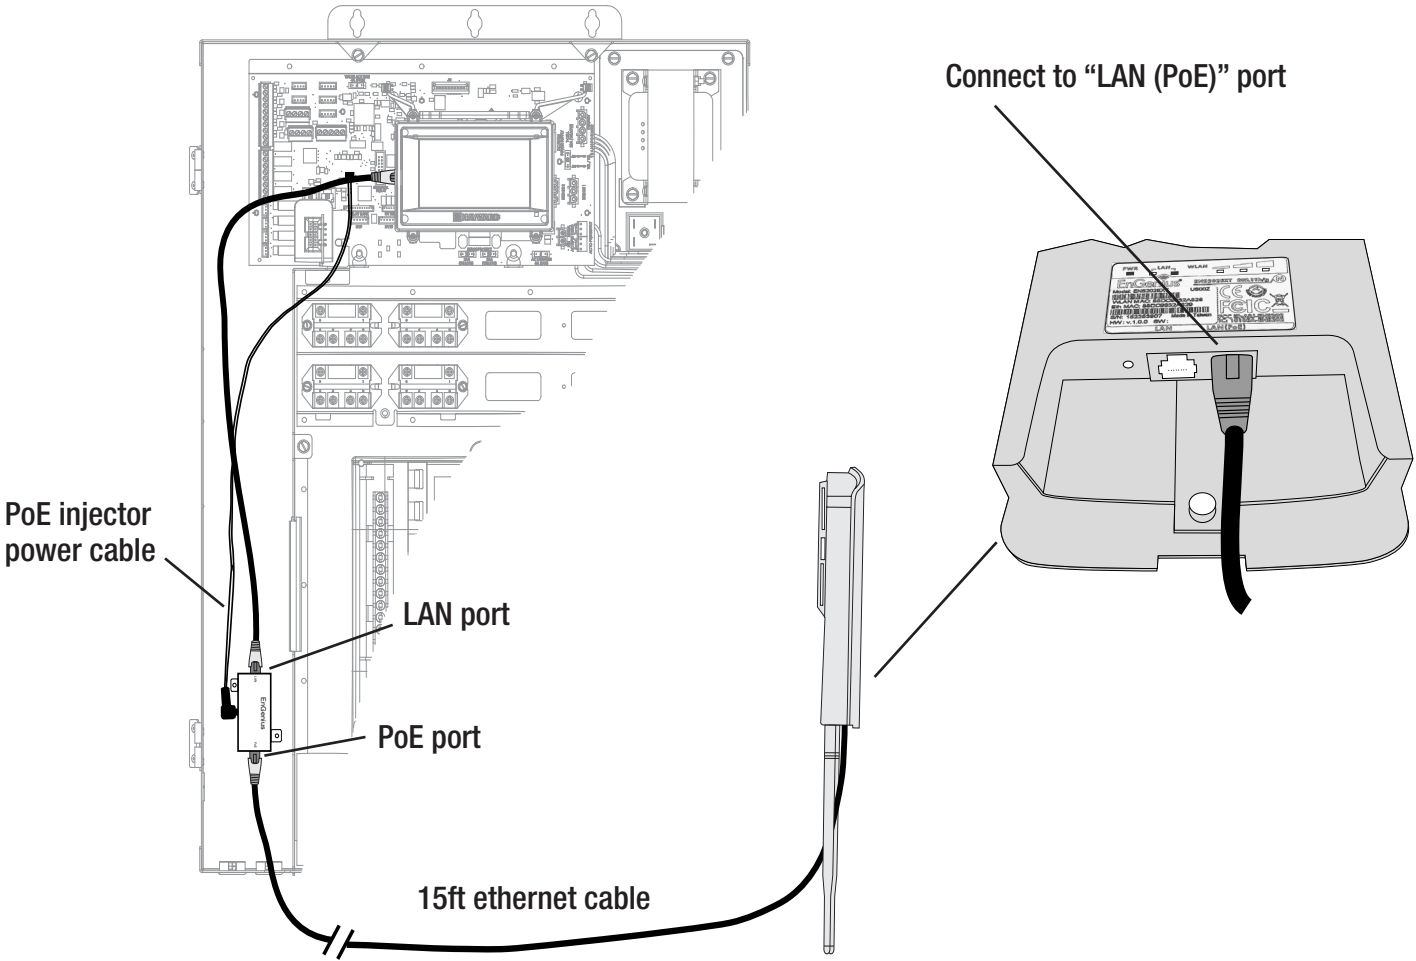

Check your OmniLogic Firmware before Installing this Product

The screenshots show the OmniLogic interface. The first screen shows the main dashboard with a hand icon pointing to the 'config' button. The second screen shows the 'system info' menu with a hand icon pointing to the 'system info' option. The third screen shows the 'system info' details for 'msp id:3233', with a hand icon pointing to the 'version' column which shows 'R4.1.1'.

component	HUA	version
MSP	0-0-0-0	R4.1.1
MP	1-65-0-2a-d4	R.3.0.1
Relays	3-10-0-0-1	R.3.0.0
EcoStar pump	10-0-0-0-4e	R.3.0.4
EcoStar pump	10-0-0-0-54	R.3.0.4

current firmware version

The HLWLAN requires that the OmniLogic run version R4.1.1 or newer firmware. Before installing the HLWLAN, check the current version of firmware and upgrade if necessary. If an upgrade is needed, OmniLogic firmware can be found at www.hayward.com/firmware. For detailed instructions on how to upgrade, view the Release Notes found next to the firmware links. After the OmniLogic’s firmware has been upgraded, proceed with the HLWLAN installation. Refer to the HLWLAN Installation manual for more information.